

Kit 1053

 
 
MAZDA 626, 4-dr Sedan, 98-02

MAZDA 626, 5-dr Hatchback, 98-02



MAZDA Capella, 4-dr Sedan, 98-02

FORD Telstar, 4-dr Sedan, 98-02



480R
754

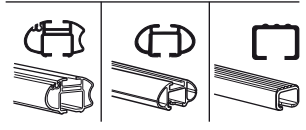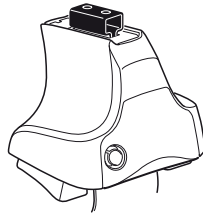

480

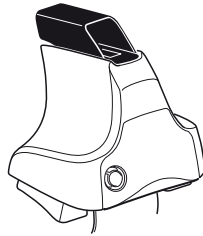  

750

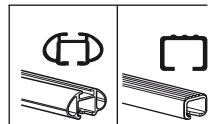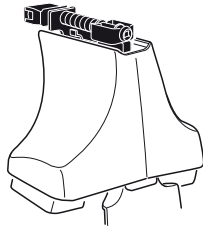  


THULE[®]
SWEDEN

ISO 11154-E

 Kit



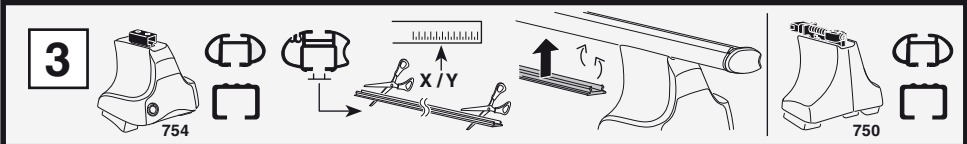

1



2

	X
MAZDA 626, 4-dr Sedan, 98-02	35,5
MAZDA 626, 5-dr Hatchback, 98-02	36
MAZDA Capella, 4-dr Sedan, 98-02	35,5
FORD Telstar, 4-dr Sedan, 98-02	35,5



1

2

	Y
MAZDA 626, 4-dr Sedan, 98-02	33
MAZDA 626, 5-dr Hatchback, 98-02	33
MAZDA Capella, 4-dr Sedan, 98-02	33
FORD Telstar, 4-dr Sedan, 98-02	33

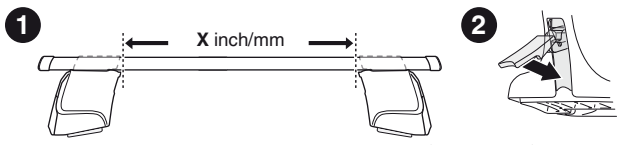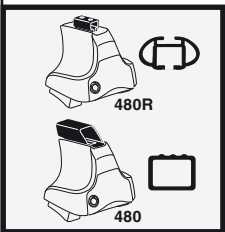  

	X inch	X mm
MAZDA 626, 4-dr Sedan, 98-02	39 ⁵/₈ "	1006 mm
MAZDA 626, 5-dr Hatchback, 98-02	39 ³/₄ "	1011 mm
MAZDA Capella, 4-dr Sedan, 98-02	39 ⁵/₈ "	1006 mm
FORD Telstar, 4-dr Sedan, 98-02	39 ⁵/₈ "	1006 mm

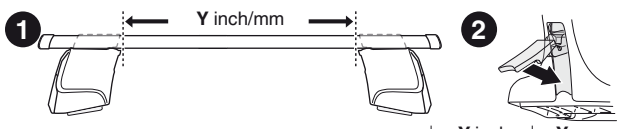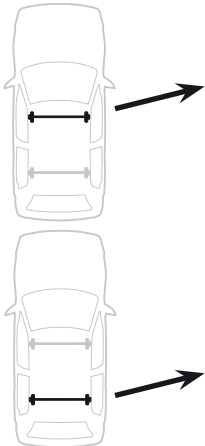  

	Y inch	Y mm
MAZDA 626, 4-dr Sedan, 98-02	38 ⁵/₈ "	981 mm
MAZDA 626, 5-dr Hatchback, 98-02	38 ⁵/₈ "	981 mm
MAZDA Capella, 4-dr Sedan, 98-02	38 ⁵/₈ "	981 mm
FORD Telstar, 4-dr Sedan, 98-02	38 ⁵/₈ "	981 mm

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
4

MAZDA 626, 4-dr Sedan, 98-02

MAZDA 626, 5-dr Hatchback, 98-02

MAZDA Capella, 4-dr Sedan, 98-02



FORD Telstar, 4-dr Sedan, 98-02

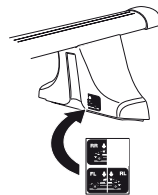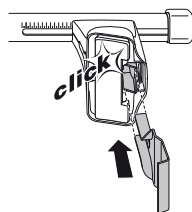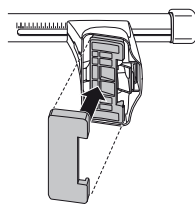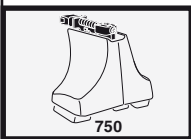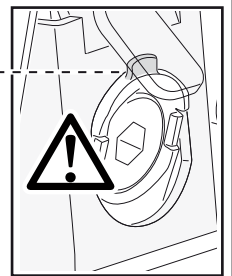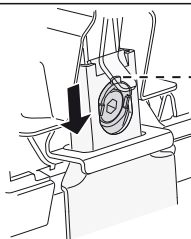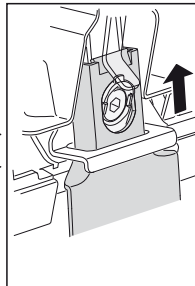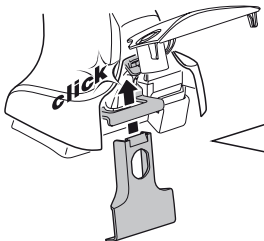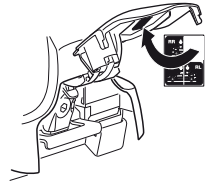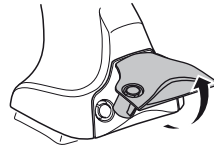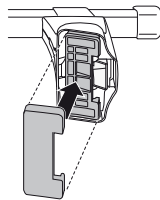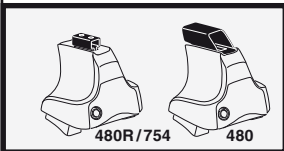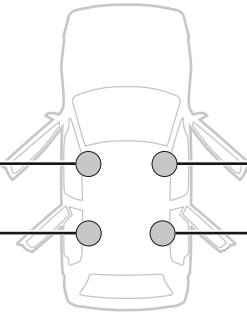

5



	X mm	Y mm	X inch	Y inch
MAZDA 626, 4-dr Sedan, 98-02	230 mm	700 mm	9"	27 1/2"
MAZDA 626, 5-dr Hatchback, 98-02	230 mm	700 mm	9"	27 1/2"
MAZDA Capella, 4-dr Sedan, 98-02	230 mm	700 mm	9"	27 1/2"
FORD Telstar, 4-dr Sedan, 98-02	230 mm	700 mm	9"	27 1/2"

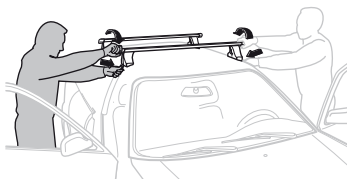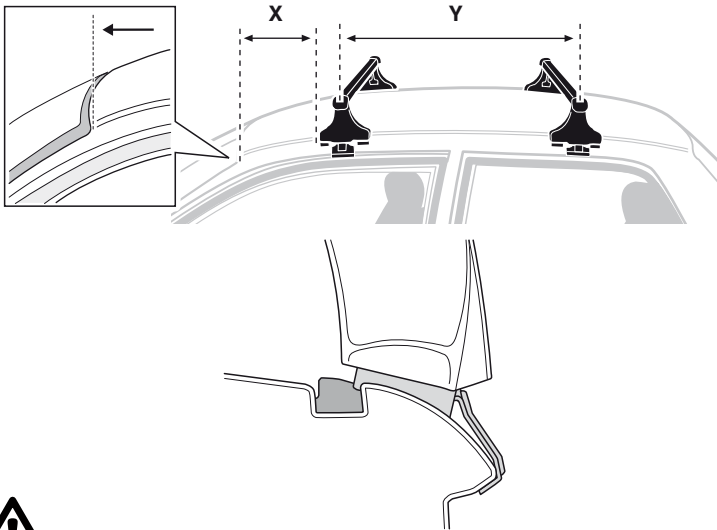  

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apertar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielieciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťta bagażníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφιγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันโนแบบสลับ


6



480R/754



480

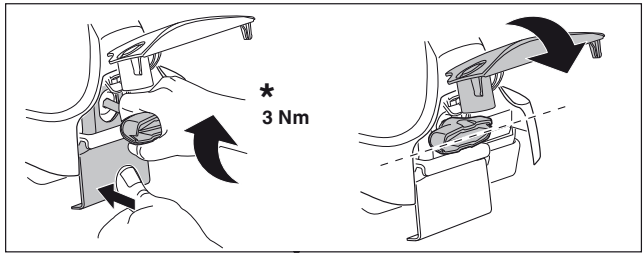



*
3 Nm




*




 
*
≈ 3 Nm

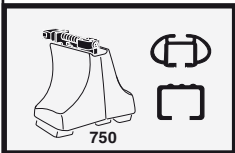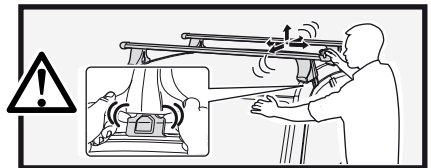


750

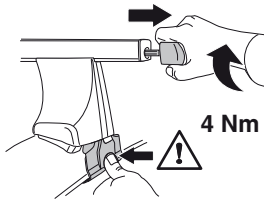


4 Nm

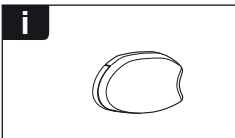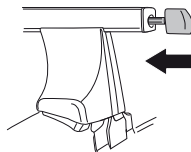


i

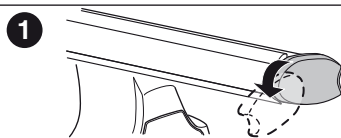


1

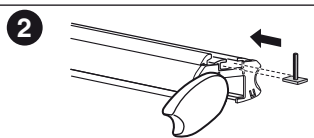 


2

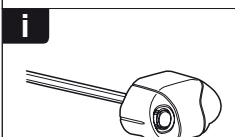


i

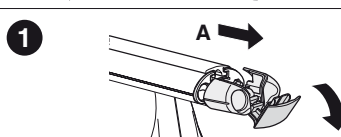

1

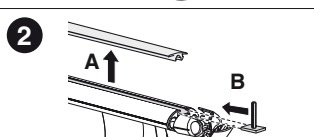 


2

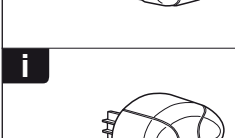

i



 1

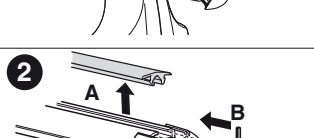

2



THULE
SWEDEN
**ONE
KEY
SYSTEM**



- 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA



WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thule.com