

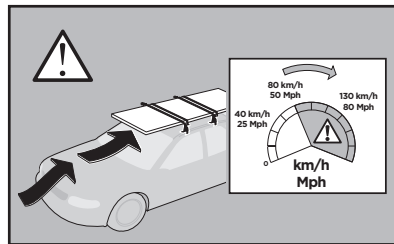
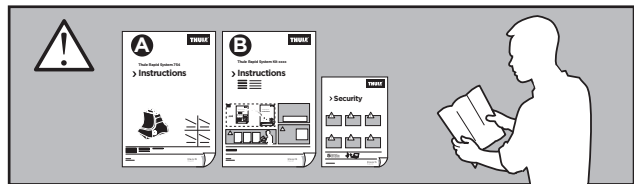


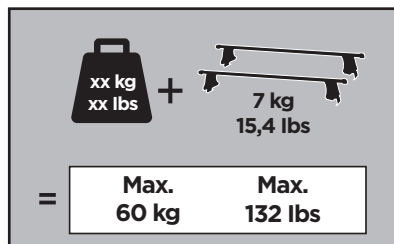

## Thule Rapid System Kit 1411

# > Instructions

TOYOTA Corolla Fielder, 5-dr Estate, 06-13

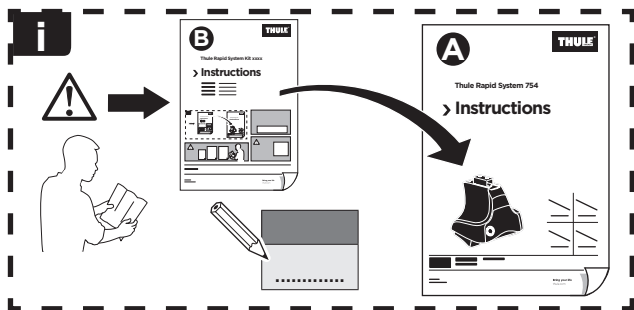

ISO 11154-E


141411

C.20141215  
519-1411-02


Bring your life  
thule.com




173 x1



175 x1



248 x2



829 x2



830 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
<b>TOYOTA Corolla Fielder</b> , 5-dr Estate, 06-13	<b>33</b>	<b>981</b>	<b>38 5/8</b>

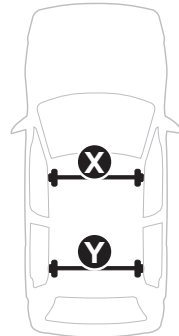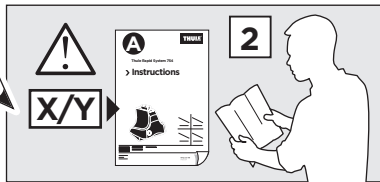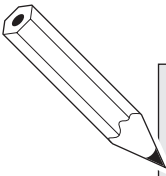



	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Corolla Fielder</b> , 5-dr Estate, 06-13	<b>30,5</b>	<b>956</b>	<b>37 5/8</b>

**2**

**TOYOTA Corolla Fielder, 5-dr Estate, 06-13**

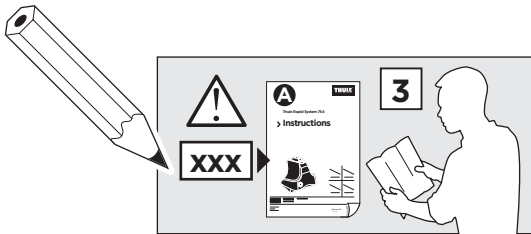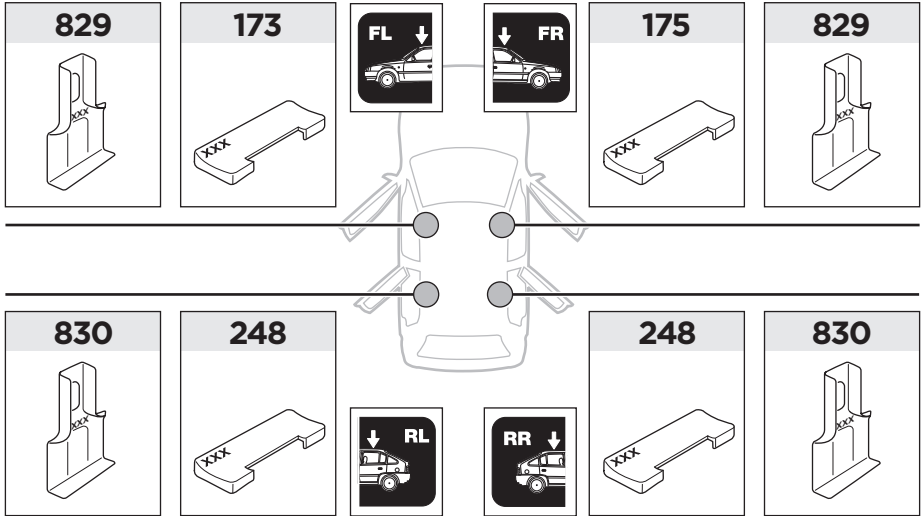

3

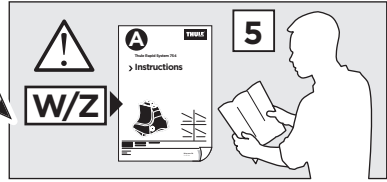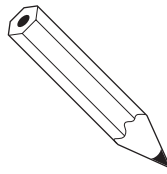

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Corolla Fielder, 5-dr Estate, 06-13</b>	<b>270</b>	<b>710</b>	<b>10 <sup>5</sup>/<sub>8</sub></b>	<b>28</b>

